



READ THESE SAFETY PRECAUTIONS CAREFULLY BEFORE USING THE UNIT!

SAFETY PRECAUTIONS

WARNING:

the polyethylene bags over the product or its packaging may be dangerous. Keep these bags out of the reach of babies and children.

Never use them in cribs, children's beds, pushchairs or playpens. The thin film may cling to the nose and mouth and prevent breathing. A bag is not a toy.

do not use over or near washbasins, bathtubs, showers or other containers with water. Store the unit in a dry place.

If you are using the unit in a bathroom, unplug it after you have finished using it. Using the unit close to a source of water can, in fact, be dangerous, even if the unit is switched off. To ensure additional protection, have installed in your bathroom a residual current device (RCD) with a nominal trip current no higher than 30 mA. Ask your electrical fitter for advice.

Never immerse the unit in water or any other liquid.

If the power cord is damaged, it must be replaced by the manufacturer, its aftersales service or a similarly qualified person to avoid a hazard.

Do not use the unit if it has fallen or if it appears to be damaged.

- Do not leave the unit unattended when it is plugged in or switched on.
- Unplug the unit immediately if you have problems when using it.
- Do not use any accessories other than those recommended by Conair.
- Unplug the unit after each use and before cleaning it.
- Avoid any contact between the unit's hot surfaces and your skin, in particular, your ears, eyes, face and neck.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Allow the unit to cool before storing. To prevent damage to the cord, do not wrap it around the unit and ensure it is stored without twisting or folding it.

To reduce hazards, damaged power cords must be replaced by the manufacturer or an authorized service center.

END-OF-LIFE ELECTRICAL AND ELECTRONIC EQUIPMENT

In everybody's interest and to participate actively in protecting the environment:

- Do not discard your products with your household waste.
- Use the return and collection systems available in your country. Some materials can in this way be recycled or recovered.

USER MANUAL

OPERATION

Unit will become warm during operation.

CAUTION

- Ensure jack is plugged into the trimmer unit before plugging the adapter into the outlet.
- Do not operate any appliance that has a damaged output cord or housing.
- Always unplug the unit before cleaning or when not in use.
- This power unit is intended to be correctly oriented in a vertical or floor mount position.

Warning: Changes or modification to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

TROUBLESHOOTING

If your cord/cordless trimmer does not seem to be taking a charge, take the following troubleshooting steps before returning it for repair:

- Be sure the electrical outlet is working by plugging in another appliance to test it.
- Make sure the electrical plug is not connected to a switch that turns power off when lights are turned off.
- Make sure that the adapter is inserted into the trimmer properly, all connections are secure and the trimmer switch is in the OFF position.

OPERATING INSTRUCTIONS

- Before using your trimmer for the first time, charge continuously for 16 hours. Maximum battery capacity will only be reached after 3 charging and discharging cycles. Always switch off trimmer for charging.
- Always check to see if the charging light is on when the cord is connected to the trimmer and the unit is not in use.
- Plug the adapter into any wall outlet (at the voltage listed on the label affixed to the adapter). Unplug the adapter when not in use.
- The adapter may become warm while charging – this is normal.
- The battery life can be improved by periodically allowing the trimmer to run until the motor stops. Immediately turn the switch and fully recharge.

FOR CORDED OPERATION

- Connect the charging jack into the receptacle at the bottom of the trimmer.
- Plug the adapter into the electrical outlet.
- Make sure the switch is in the Off position and let the trimmer charge for a few minutes before use.
- Turn switch to the On position for use.
- Unplug the adapter from the electrical outlet after use and store in a dry place away from small children.
- Do not wrap cord around trimmer.

MAINTENANCE INSTRUCTIONS

TAKING CARE OF YOUR TRIMMER

BLADE CARE

Remove the cutting guide after each use. Cleaning the trimmer blades regularly will maintain their optimal performance.

Removable blades

To make cleaning easier, the BabyIiss Paris® trimmer blades can be removed. Make sure the trimmer is turned off. Hold the trimmer with the blades pointing up and remove them by pressing the top of the blade (Fig. 1).



Fig. 1



Fig. 2

Brush the blades using the cleaning brush to remove any hair.

Periodically, it may be necessary to oil the blades. After cleaning, attach a trimmer head, switch unit on and oil the blades using a few drops of lubricating oil.

Oil is specially formulated for trimmers; it will not evaporate or slow the blades down.

SELF-LUBRICATING BLADES

The blades of your trimmer have a reservoir pad for releasing the necessary amount of oil for proper operation of your trimmers, time after time. Nevertheless, it is recommended that it be refilled occasionally when you notice performance is not as high.

Remove the blades as described above.

Squeeze a few drops of oil onto the pad (Fig. 2).

Then replace the blades on the trimmer.

The oil is specially formulated for the trimmer; it does not evaporate nor does it slow the blades.

It is also possible to obtain replacement blades when these are worn out or damaged.

PRODUCT FEATURES

- 32mm blades: Moveable blade - W-Tech: CMS (Chrome-Molybdenum-Stainless Steel) / Fixed Blade: stainless steel
- 2 cutting guides (2-1 4mm and 3-15mm) for hair and beard
- 6-position precision guide (from 0.5-3mm) for very short cuts
- 18mm shaving head for face
- 7mm precision blade, to create precise contours and original designs
- Nose/ear accessory, to eliminate unwanted nose and ear hair
- On/Off switch
- Power indicator light
- Cleaning brush
- Charging and storage base



IMPORTANT INFORMATION REGARDING THE NI-MH BATTERIES OF THIS UNIT

To obtain and maintain the longest battery autonomy possible, allow unit to charge for 16 hours before using it for the first time and then repeat process approximately every three months. Full autonomy of the unit will be obtained after three complete recharge cycles.

CHARGING THE UNIT

Before using the trimmer for the first time, allow it to charge for 16 hours. A full charge will allow you 40 minutes of autonomous use. Remove the trimmer and all the accessories from the base and turn the base over. Open the security tongue, insert the power cord into the opening intended for this, pushing it in firmly and replace the security tongue. Place the cord in the groove. Put the base back in place and connect it to the mains.



WATERPROOF

For greater comfort and convenience, your trimmer is waterproof and can even be used in the shower. Easy to clean, maximum hygiene is guaranteed.

ATTACHING AND REMOVING ACCESSORIES

Make sure that the unit is switched off before changing the trimmer head or accessories. To attach a head, fit the base of the accessory onto the unit, pressing it until you hear a click. To remove a head, hold the handle of the unit in one hand and push up on the head with your free hand (Fig. 3).



Fig. 3

USING THE CUTTING GUIDE

The cutting guide guarantees equal cutting length.

IMPORTANT: Always attach the cutting guide **BEFORE** turning the trimmer on, and turn unit off before changing the guide. The cutting length of your E835ECL trimmer is manually adjustable. To increase the cutting length, push the cutting guide up. To reduce the cutting length, push the cutting guide down. The selected length is displayed at the back of the trimmer.

Make sure you always trim or style your beard against the hair growth.

TYPES OF BEARDS/MUSTACHES



GETTING STARTED

Decide on the type of beard or mustache that best suits your face, taking into account the size of your face and natural growth and thickness of your beard and/or mustache. After deciding on the form of the beard and/or mustache, it is easy to maintain its appearance by using the trimmer as soon as you feel it is necessary. For better results, we recommend cutting the beard when it is dry. This helps make the cut precise and comfortable.

OUTLINING YOUR BEARD

- It is always best to begin with a dry, clean beard.
- After you have combed through your beard in the direction it grows naturally, you will want to outline the desired shape, beginning under your jawline.
- Begin defining your beard's shape under your chin and work upward on each side of your face toward your ears. Then define the upper outline of your beard across your cheeks, past your sideburns and toward your hairline.

The shaving head adapts perfectly to the contours of your face and gives even the most difficult parts a close shave. **Result:** a neat and precise cut in less time, for an impeccable look.

Patterning your hair and giving it a perfect finish:

Use the precision trimmer. Your precision trimmer comes with an exclusive special short cut blade. Its narrow size (7mm) enables you to pattern your hair and beard with great accuracy.

To eliminate undesirable nose and ear hairs:

Gently insert trimmer head into the ear or nose and cut the hairs. **NOTE!** Use only in the opening of the nostrils or ears to avoid any risk of injury.

CERTIFICATE OF WARRANTY

Congratulations! You have purchased a guaranteed CONAIR product.

Conair extends the following service warranty, which entitles you to enjoy all the advantages that our network of Authorized Technical Services provides.

Terms and Conditions of the Certificate of Warranty:

- The warranty is valid from the date of purchase. To make it effective, the customer must present a proof of purchase and the Certificate of Warranty.
- The warranty only applies to proven manufacturing defects. The product will be inspected and will be exchanged and/or repaired only if it presents any electrical or mechanical manufacturing defect.
- The warranty does not apply:
 - If the product has been used for purposes for which it has not been designed.
 - If the damages are not manufacturing defects, e.g. impact damage, spill damage, insect damage or any other damages found during inspection. If the product has been misused, i.e. contrary to what is indicated in the instruction manual.
 - If the damages were caused by accidents, accidental or deliberate acts, or voltage 10% greater or lesser than the one indicated on the product's rating plate.
 - If the damages are due to the normal wear of parts and/or accessories during normal use.
 - If the damages were caused to accessories

and parts during improper use of the product. ****We recommend that you read the instruction manual.**

IMPORTANT! PLEASE KEEP THIS CERTIFICATE OF WARRANTY, STAMPED BY THE ESTABLISHMENT WHERE THE PRODUCT WAS PURCHASED. YOU WILL BE REQUIRED TO PRESENT IT FOR ANY CLAIM UNDER THIS WARRANTY.

MODEL #: E835ECL

SERIAL #:

DATE OF PURCHASE:

INVOICE #:

WARRANTY DURATION: 24 MONTHS (2 YEARS)

VENDOR'S NAME AND STAMP:

CLIENT'S SIGNATURE AND ID #

TECHNICAL SERVICE INFORMATION

CONAIR CENTRAL OFFICE

SERVICIO TÉCNICO ELECTRÓNICO VITACURA VITACURA N° 6780 MODULO "G" LOCAL 03 VITACURA

TEL: 22185253

E.mail: stavitacura@gmail.com

BRANCH OFFICE

SERVICIO TÉCNICO ELECTRÓNICO MONEDA MONEDA N° 772 LOCAL 314 "A" (Galerías Nacionales)

SANTIAGO CENTRO

TEL: 26326268

E.mail: stamoneda@gmail.com

IMPORTED BY CONAIR COMERCIALIZADORA CHILE LTDA
VITACURA 2670, PISO 15,
LAS CONDES, SANTIAGO, CHILE
chile@conair.com